



DESCRIPTION	QTY.
AUXILIARY FIRE LATCH ASSEMBLY-1	1
#6X3/4" TYPE AB FLAT HEAD SCREW	4
STRIKE HOLE PLUG	1

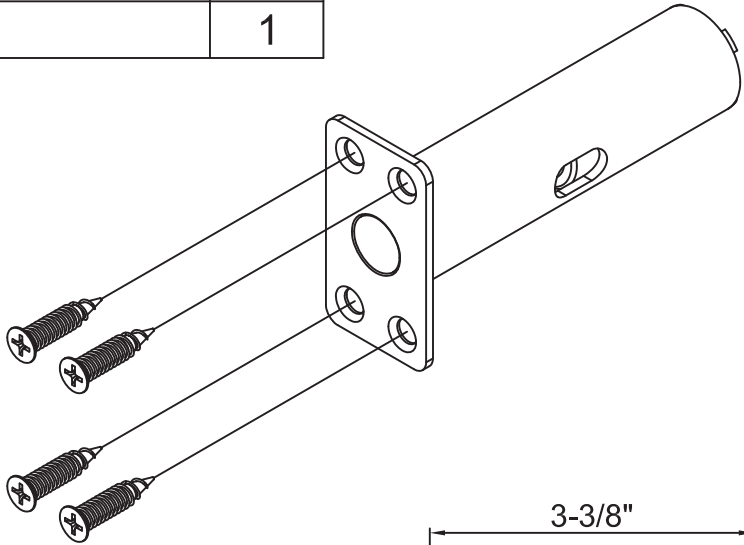


STRIKE HOLE PLUG

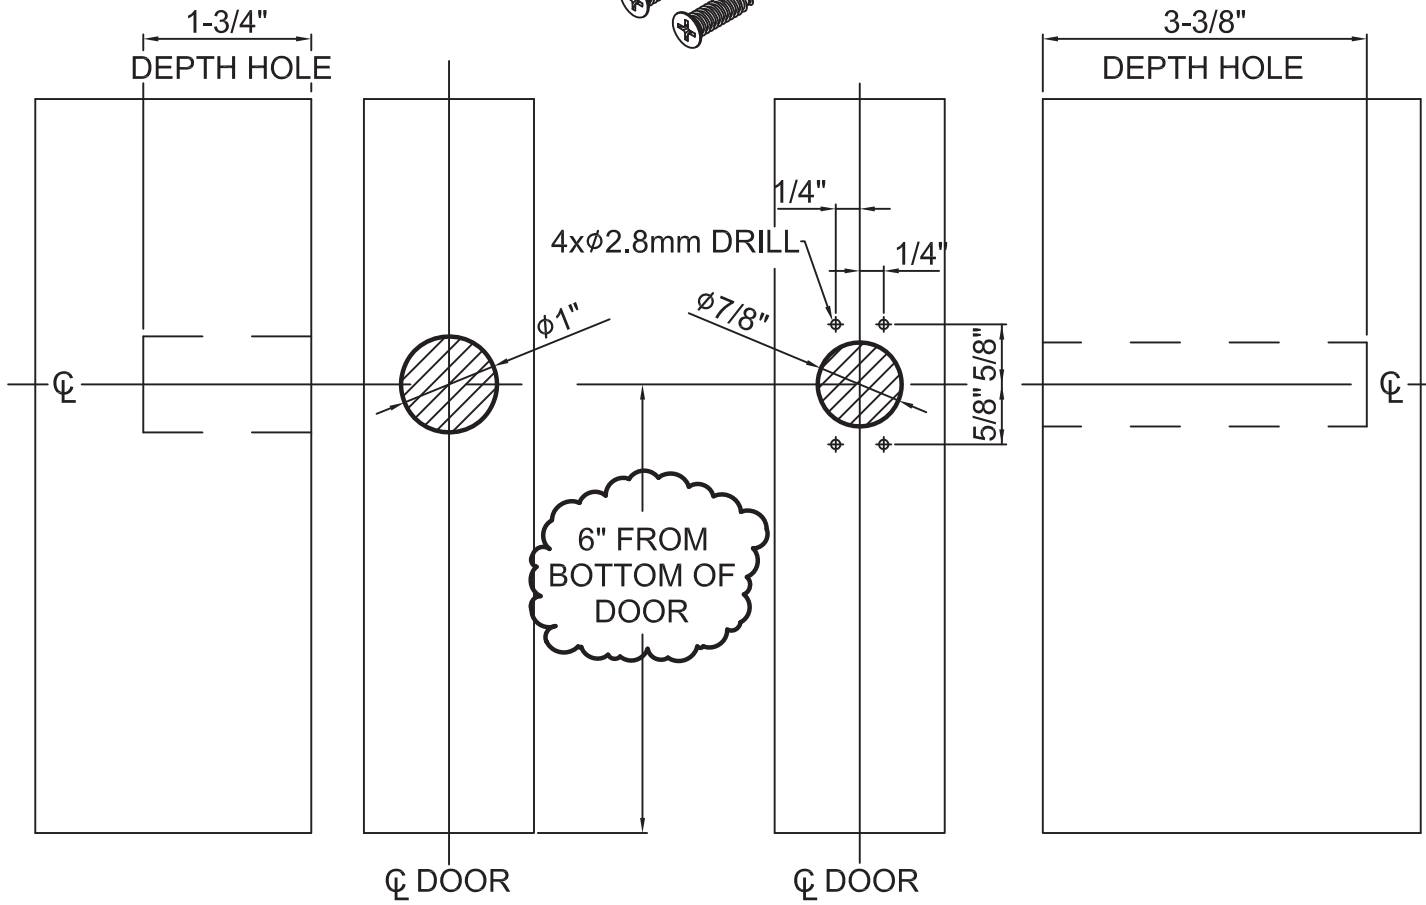


STRIKE HOLE PLUG
DOOR LEAF

AUXILIARY FIRE
LATCH ASSEMBLY
DOOR LEAF

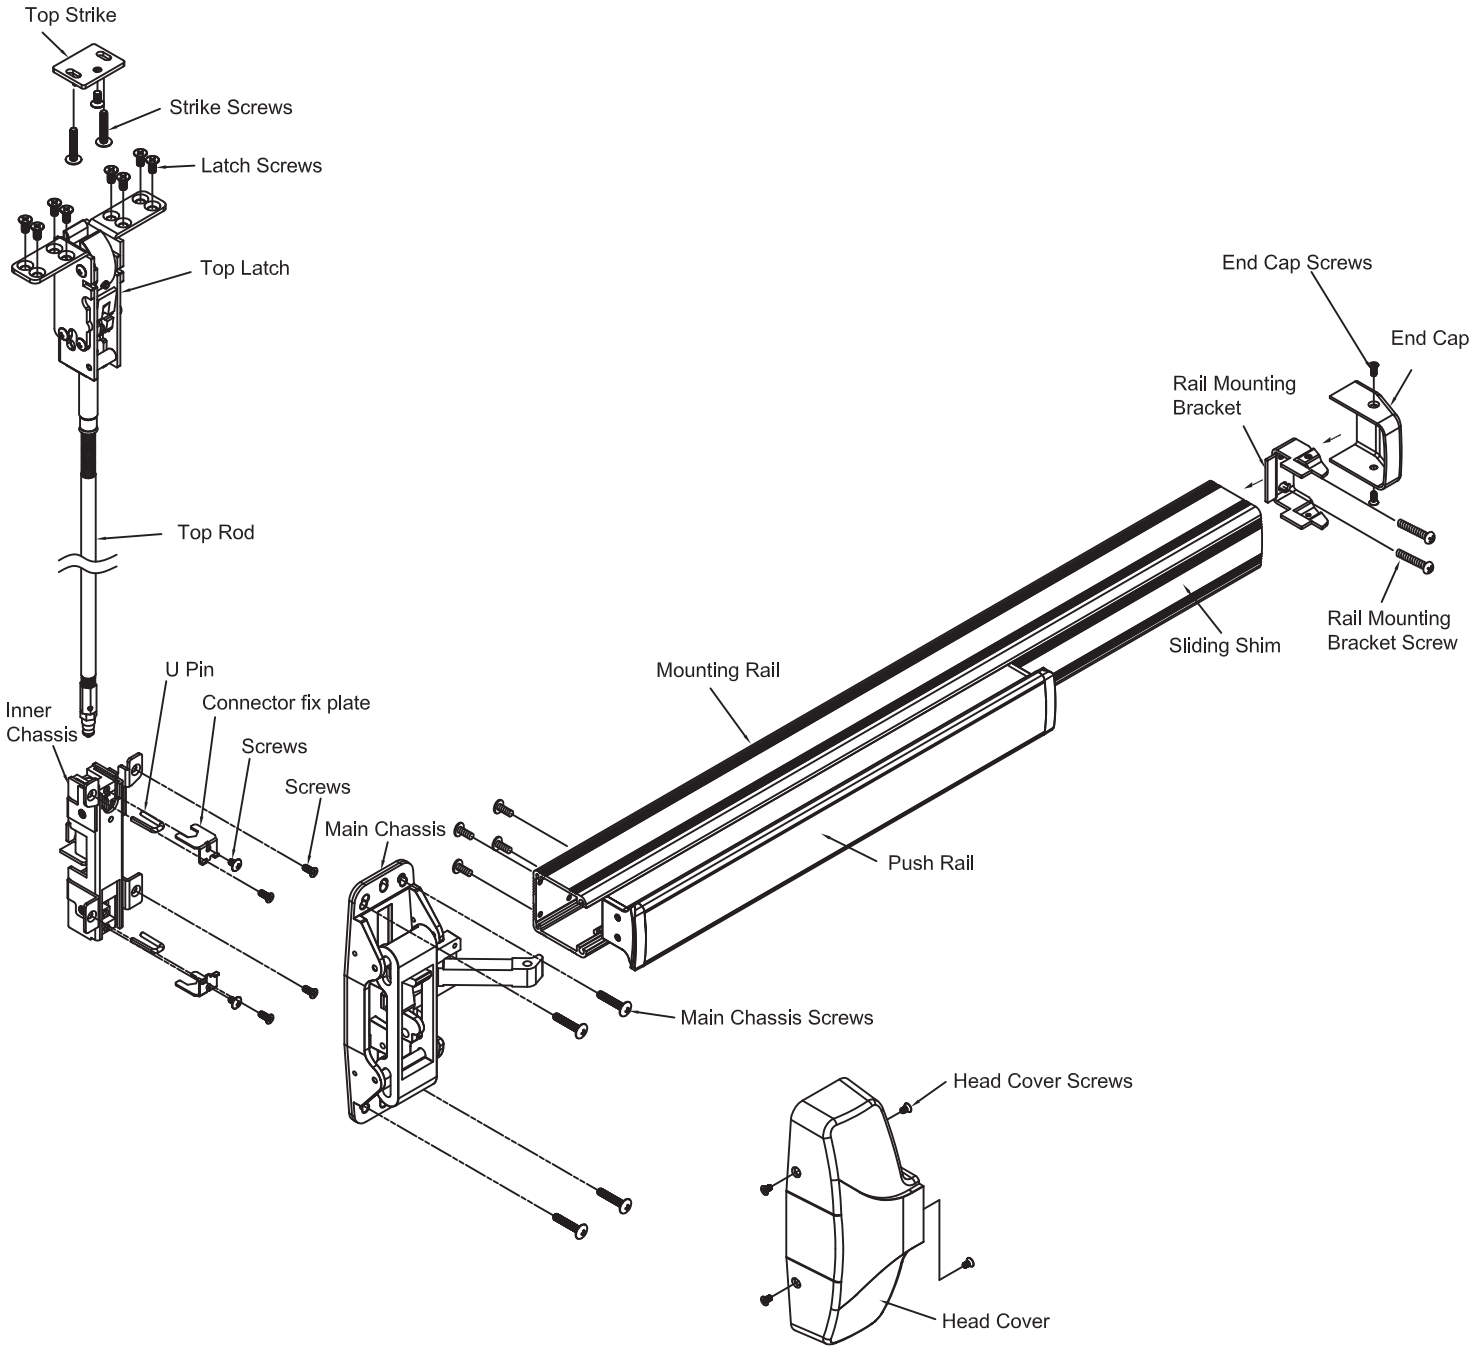


(4)# 5/32"x3/4"
screws

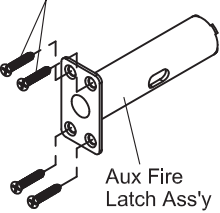


Aux Fire
Latch Ass'y


1.LHR

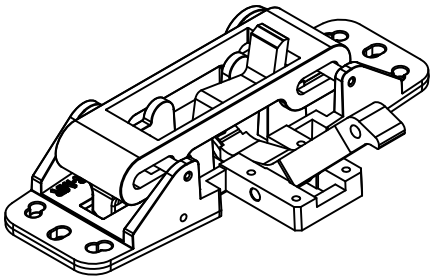


- 2-1.Remove chassis pin & main slide & tube & fixed screw.
- 2-2.Remove lift lever & lift lever pin.
- 2-3. Rotate 180° main slide & lift lever.

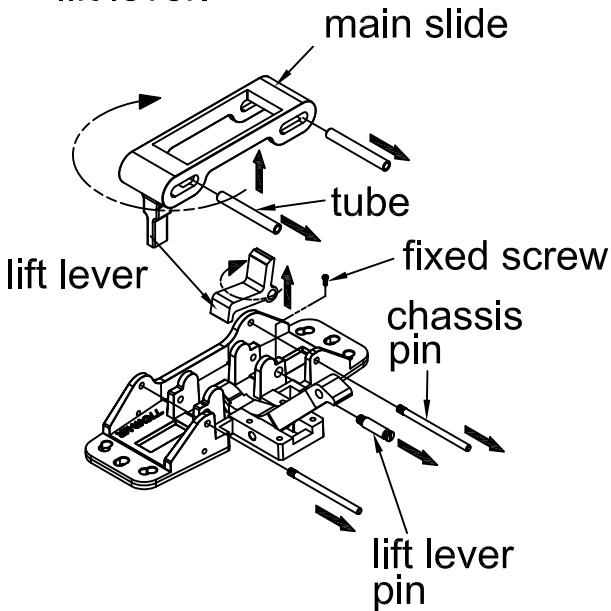

- 3-1.Reassemble lift lever at opposite side, as shown.
- 3-2.Replace main slide and chassis pin and lift lever pin. and fixed screw.

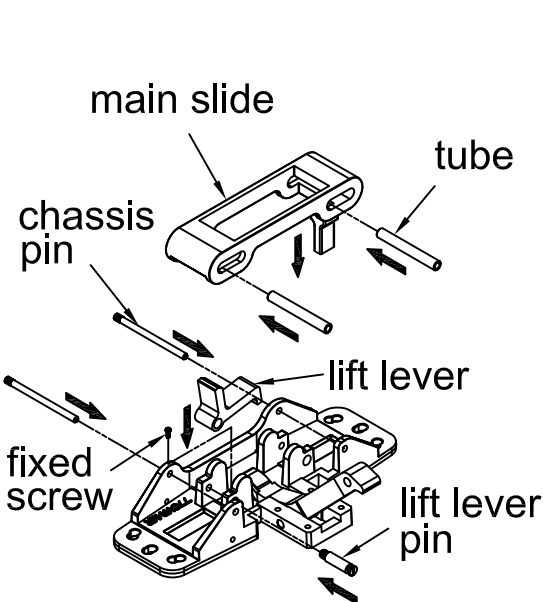

1.RHR Done.

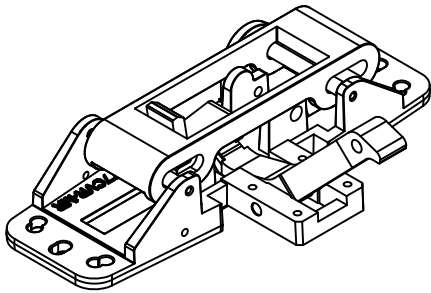

1.INSTALL INNER CHASSIS & TOP LATCH

