

INSTALLATION INSTRUCTIONS

Art#: DC6236BCG

CONCEALED DOOR CLOSER DOUBLE ACTION

Unit: mm

1

1. The slider position should be away from the pivot side as shown.

WARNING:
HOLD OPEN FEATURE
IS PROHIBITED ON FIRE
RATED DOORS

2

1. Locate the closer body as shown.
2. For wood door, drill the hole by $\varnothing 2.5$
For steel door, drill the hole by $\varnothing 4.2$ firstly and
then tap the M5 thread

3

Turn the closing valve clockwise
all the way until it stops.

② Turn by 50°

4

Connect the main
arm and slider by
provided screw.

② Increase + Decrease

EN3	EN4	EN5	EN6
-8	0	+9	+20

5 Closing Control:

Adjust the closing time 3-5
Seconds.

EN3	EN4	EN5	EN6
80Kg	100Kg	140Kg	180Kg
950mm Max	1100mm Max	1250mm Max	1400mm Max

6 Latch Control:

DP2 + DP5/2 IF CLOSER
BODY IN FRAME OR LEAF.

DP5 IF CLOSER
BODY IN LEAF.

Adjust the latching time
within 1 to 2 seconds.

15-0°

7 Backcheck Control:

Backcheck cushion to protect the
door or the people behind the door.

Never close this valve completely
or product shall be damaged.

65°-85°

Attention

When using the hold-open function, ensure the backcheck screw is fully
open; otherwise, the door will not reach the hold-open position.

Do not operate the door closer beyond its maximum opening angle. A
floor door stop or an alternative stop is strongly recommended.

This door closer contains a high-tension spring within the mechanism
body. Do not attempt to dismantle the mechanism under any
circumstances.


INSTALLATION INSTRUCTIONS

Art#: DC6236BCG

CONCEALED DOOR CLOSER DOUBLE ACTION

DURABLE
COLLECTION

Unit: mm

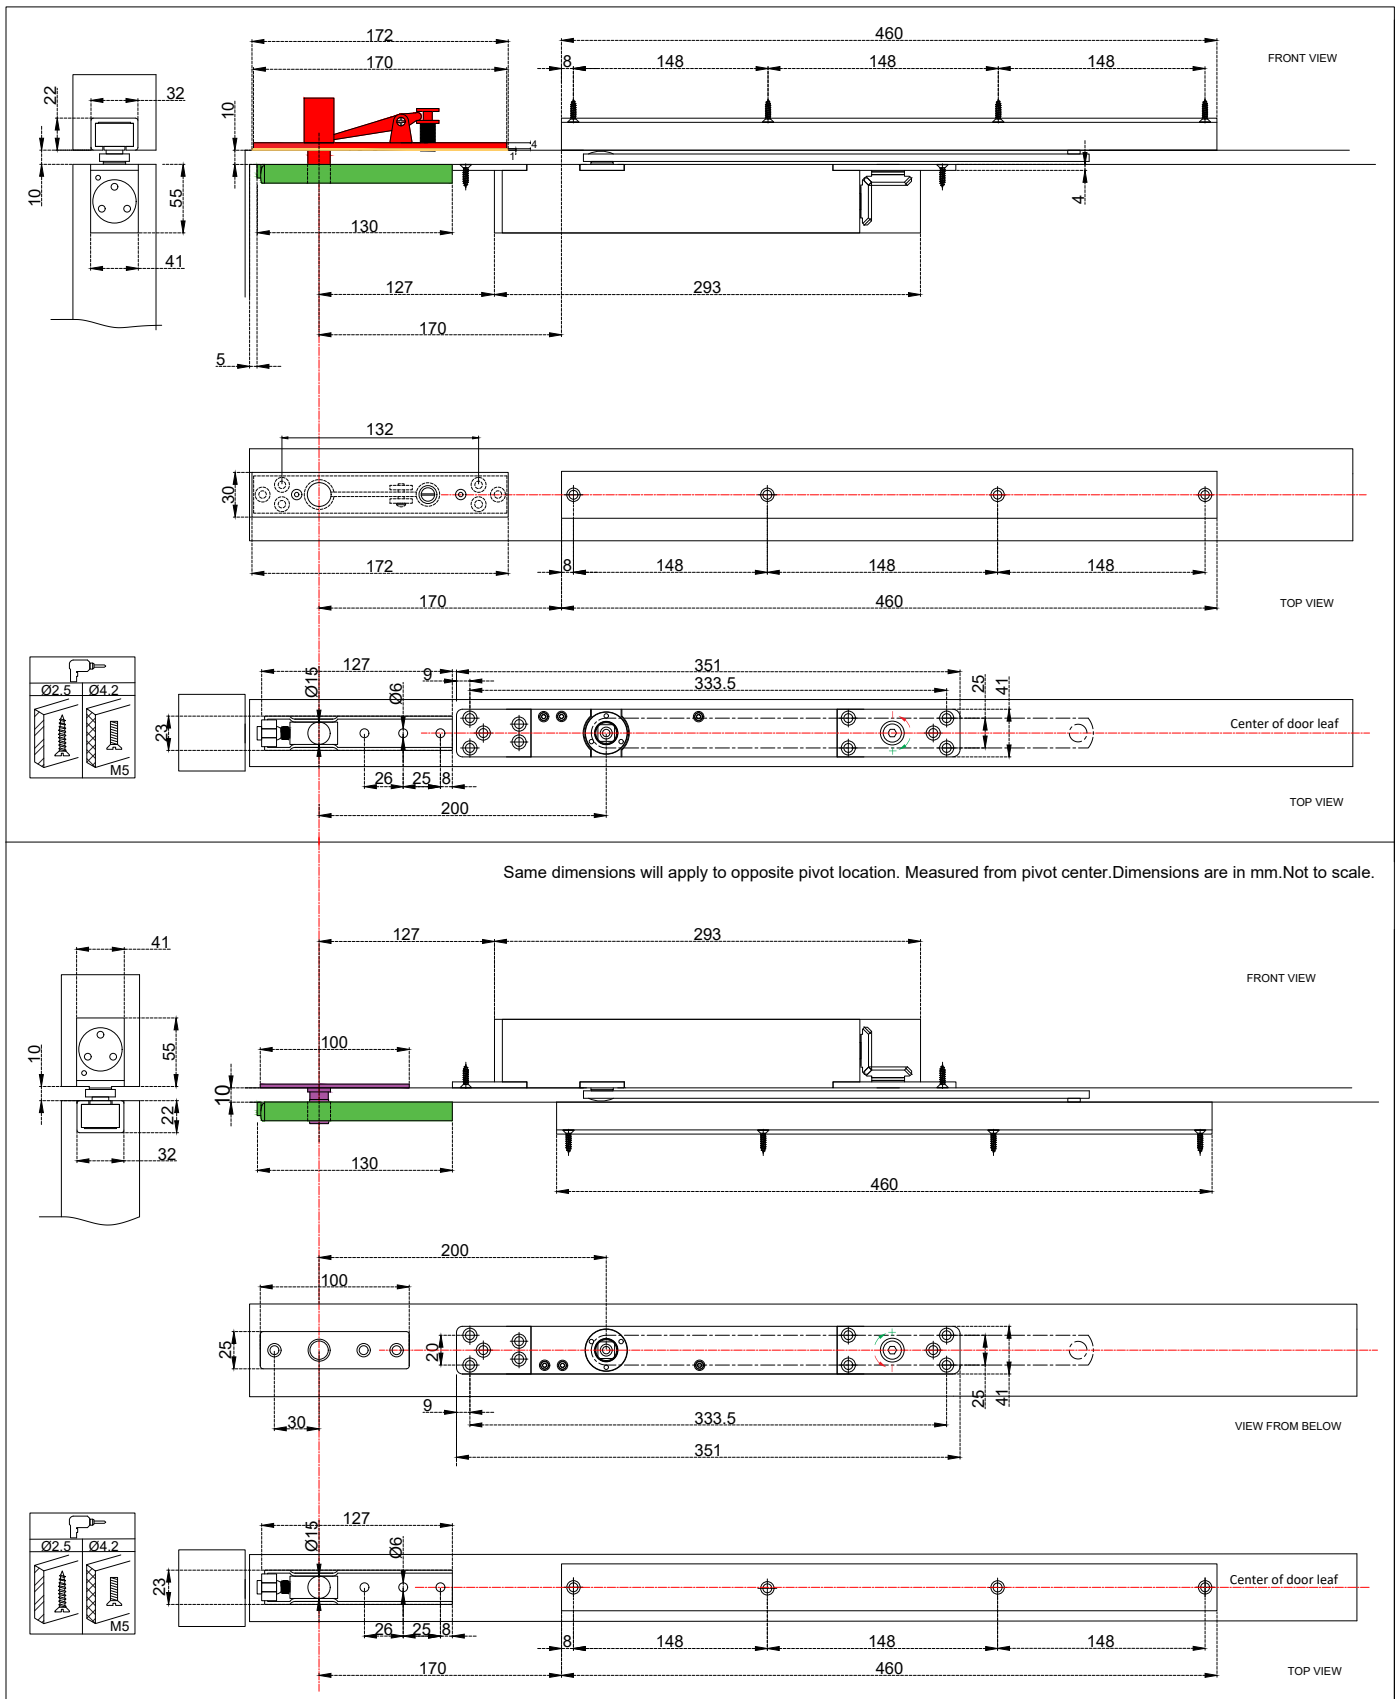

- 1- Inspect the door closer every three months to ensure the connecting arm and track are secure, making adjustments if needed. Also, check the closing and latching speeds to ensure smooth and proper operation.
- 2- Re-tighten all fixing screws if necessary.
- 3- Lubricate the slide track if needed to allow free movement of the slider.
- 4- Apply light oil to the arm knuckle joint and door pivot.

